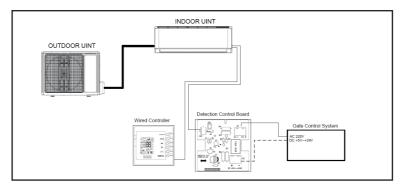
# INSTALLATION INSTRUCTION OF GATE CONTROL

#### Gate-control Function

This detection control board is only suitable for Gree split type wall-mounted air conditioner with gate-control function. The AC will run after plugging in gate-control card and stop running after plugging out the card. Upon plugging out the card to stop the unit, the running states of the unit will be memorized. After plugging in the card, the unit will be under standby state or resume running according to settings. The AC will run when the customer plugs in the card and automatically stop when he plugs out the card, which ensures unit off after leaving of persons and saves energy.

Fig.1 is about simple sketch for communication network of detection control board for Gree split type wall-mounted air conditioner series.



**Fig. 1** Simple Sketch for Communication Network of Detection Control Board (with Wired Controller) for Gree split type wall-mounted air conditioner Series.

## **Working Process of Gate Control**

- 1. When the indoor unit hasn't been connected to the detection control board, this air condition is the non-gate controlled air conditioner. The air conditioner can operate at normal status.
- 2.When the air conditioner has been connected to the detection control board, if the user hasn't plug in the gate-control card, the air conditioner will enter into standby status automatically after it has been turned on for 6mins. When plugging in the gate-control card, air conditioner will operate normally at the previous mode.
- 3. When air conditioner has been connected to the detection control board, when user operates the air conditioner after plugging in gate-control card, the air conditioner can operate at normal status.

4. When air conditioner has been connected to the detection control board, after plugging in gate-control card and the air conditioner operates normally, the air conditioner will enter into standby status automatically after plugging out the gate-control card for 6mins.

## **Detection Control Board Interface Sketch is shown in Fig.2**

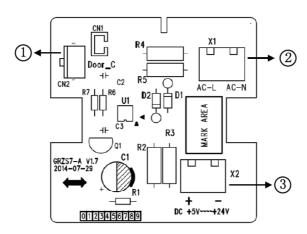


Fig2 Detection Control Board Interface Sketch

- ① Interface connected with main board of indoor unit (3-core blue).
- ② Wiring terminal X1(AC\_L,AC\_N),suspended in the middle, connects with gate-control signal input. The voltage should be about 220V.
- ③ Wiring terminal X2(+5V...+24V),suspended in the middle, connects with gate-control signal input. The voltage should be about +5V to +24V.

**Note:** When this detection control board is connecting to the gate-control system, it can only connect to ② or ③.

The gate-control function can be realized after the detective interface of detection control board connects with interface of gate-control card and signal interface of it connects with the main board.

### **Products Parameters**

Model: MK010 gate controller

Working Voltage: AC 220-240V, 50HZ or DC +5V-+24V

Power: 1W

Working temperature: -10 --48°C

## Installation of Detection Control Board

 


Fig. 3 Installation Sketch of Detection Control Board

No.	1	2	3	4
Description	Base box of socket installed in	Bottom plate of	Front panel of	Screw M4X25
	the wall , a hole with( L×W×D)	detection control	detection control	
	100mm×100mm×50mm	board	board	

Note: Detection control board with (L×W×H) 73.5mm×73.5mm×33.0mm

Fig.3 is about installation process of detection control board. The following items should be attended.

- 1. Installation must be performed by professionals. Either 220-240V or DC 5-24V is ok.
- 2. Cut off the power of heavy current wire covered in the mounting hole in the wall before installation. Never perform the installation with electricity.
- 3. Press the bottom plate of the detection control board on the wall, and then make it and front panel of detection control board together.
- 4. At last fix the bottom plate and front panel of detection control board together with screw ST2.2X6.5.
- 5. There shouldn't be any large-power electric appliance and firming base nearby to avoid interference source.
- 6. Avoid sunlight and rain and do not install it at wet space.
- 7. Do not install the unit at the place where there is corrosive gas, serious dust, salt fog and oil smoke or which is specially wet.
- 8. The detection control board must be installed at concealed place and far from water and fire.



60001200008